




# Australian Bollards

australianbollards.com.au



**AB-HB-4000**

Asset Protection -  
DIY Height Marker

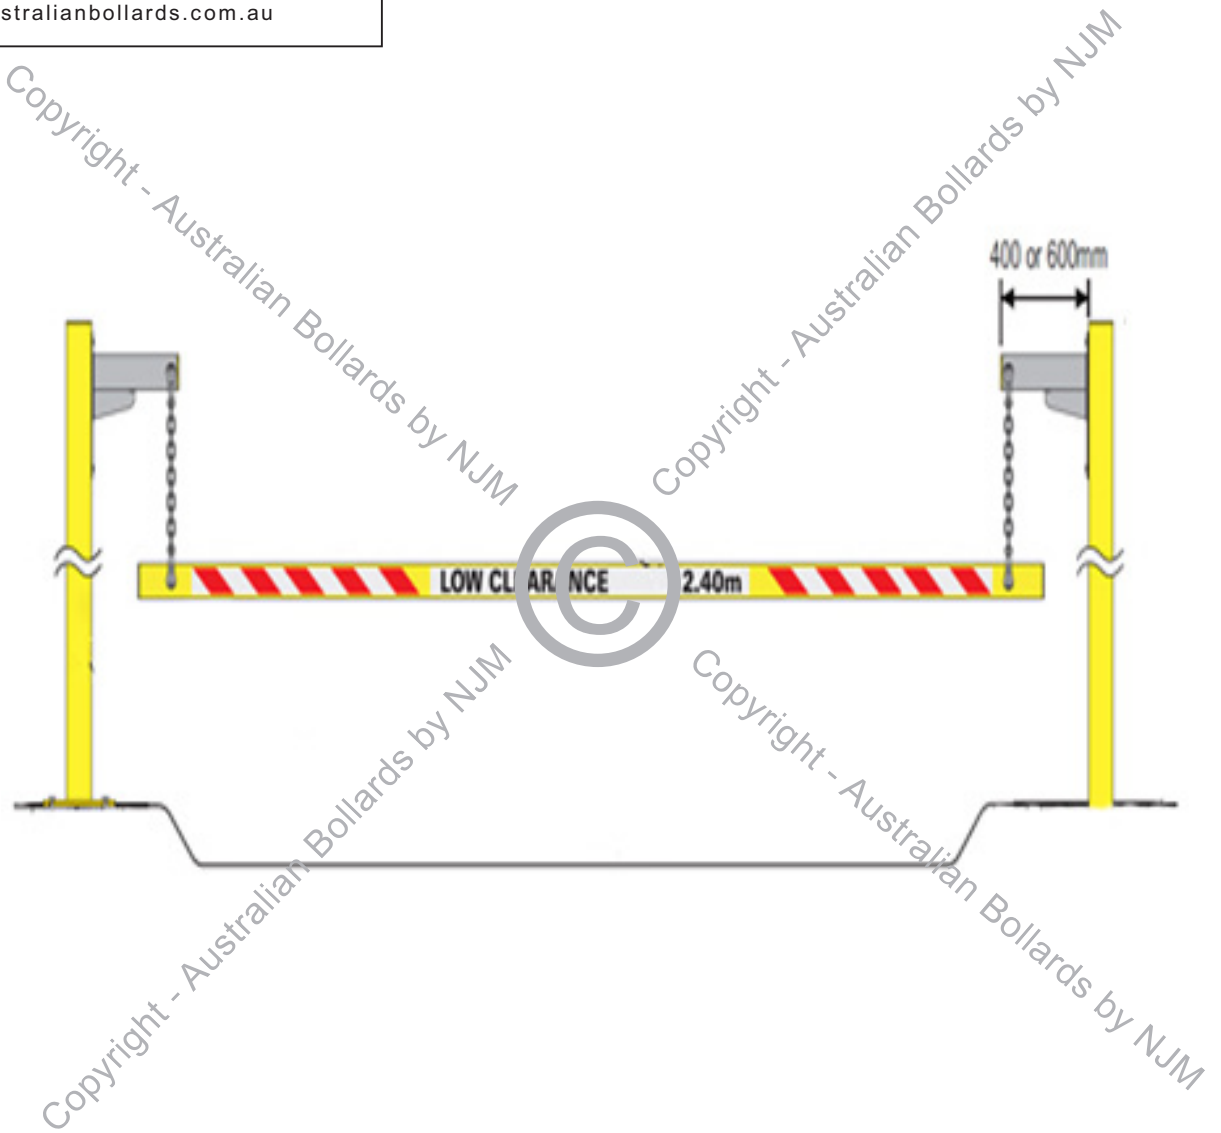

The Essential First Step



Length 4000mm

Material 100 x 50mm Galvanised tube with 6mm Galvanised chain.

Colour Powder Coated Yellow

Installation Masonry anchors to building.

Weight 19 Kgs

**Additional Notes** Our Height Marker eliminates damage to vehicles and property caused by oversized vehicles entering areas of restricted height. Height Marker includes Decal, Bolts and Fixings for installation to be coordinated by the customer.

Application: Staff car parks or underground car parks, protecting overhead edges and building structures vehicle entrance ways, from damage caused by trucks or other mobile equipment using height as a limiting barrier.